

GL-E48 名片型 HD 720P 針孔蒐證 DVR

[充電及 TF 記憶卡]

建議使用 16GB 或 32GB class10 / FAT32 格式。

充電時**綠燈恆亮**，充飽燈熄，約 2~3 小時，最長勿超過 5 小時。

[指示燈說明]

綠燈恆亮 - 充電中

藍燈恆亮 - 電源開機中

紅燈恆亮 - 錄影/純錄音中

綠燈熄滅 - 充飽電

藍燈閃爍 - 弱電

紅燈閃爍 - 沒插卡/卡滿

產品說明



DIY示意圖



DIY示意圖



[操作]

插入記憶卡，Mode 先選好要 Video 影音同步還是 Audio 純錄音的模式。

開機自動錄影：指撥 **電源 Power On** 指示燈亮 **藍燈**及**紅燈**，開始錄影或純錄音。

關機自動存檔：指撥 **電源 Power Off** 指示燈藍燈及紅燈熄滅。

格式化：按住 **格式化 Format** 鍵，然後指撥 **電源 Power On** **藍燈恆亮**、**紅燈閃爍**，然後紅燈熄再指撥 **電源 Power Off**，格式化完成。

[日期設定]

在根目錄下新增一個 **settime.txt** 文件檔，例如(2017 年 2 月 1 日 上午 8 點 6 分 6 秒)

2017.02.01 08:06:06

存檔文字文件檔後，開機測試錄影一小段。

[產地]臺灣

[展示中心]綠廣興業有限公司

[地址]台北市南港區忠孝東路六段 388 號

[E-Mail]service@taiwan-spy.com

HD 720P Business Card Type DVR/Audio Recorder

Model: GL-E48

[Charge the battery & Insert memory card]

Plug the micro USB end of cable into USB port and plug the other end to an USB power source. After charging, with golden contact facing down, insert the memory card into the TF slot. Then the device will be ready for further operations.

Note: Device can't be powered on when card is inserted.

Solid Green LED - the device is charging.

Green LED goes off - the device is fully charged.

Solid Blue LED - the device is power on.

Blinking Blue LED - Low battery.

Solid Red LED - the device is recording.

Blinking Red LED - No card inserted/Card full.

Description

DIY Illustration

Lens

Power

Video

Only Audio

Format

TF slot

Vibration

Reset

USB port

LED Indicators

DIY Illustration

DIY Illustration

[Date & Time setting (for Windows system)]

- (1) from the desk top right-click to open Notepad, create a text(.txt)file names settime
- (2) On the first line of the file, enter date and time information as
year.month.day hours.minutes.seconds.
For example, suppose the times is 2017/2/1; PM08:00,
please enter 2017.02.01 20:00:00
- (3) Save the file to the root directory of the memory card.

[Operation]

- (1) Power on: With TF card inserted , switch **Power On**.
- (2) Power off: With TF card inserted , switch **Power Off**.
- (3) Video Recording: **Power On** the device; **Mode switch Video** to start recording.
- (4) Audio Recording: **Power On** the device; **Mode switch Audio** to start recording.
- (5) Standby Mode: **Power On** the device; **Mode switch Mode**
If the device has no operation for 3 mins, it powers off itself.
- (6) Reset: When the device is functioning abnormally, press **Reset** once to reset it.

[Format memory card]

- (1) Power and hold **Format** key, and then Power On the device
by switching the **Power** switch to **On**.
- (2) You will see **Blue LED** will be on and **Red LED** flashes.
- (3) When device powers off itself, the format is complete.

Made in TAIWAN

[Exhibition center] GREENLEAF Enterprise Co., Ltd.

[Address] No. 388, Chung-Hsiao E. Rd.,Sec6, Taipei City, Taiwan,R.O.C.

[E-Mail]service@taiwan-spy.com